NS-HD02_10-0693_QSG_V1_ENG_Final_press.pdf 1 9/14/2010 11:39:01 AM

V1
FINAL
FOR PRINT

INSIGNIA™

Quick Setup Guide
NS-HD02 HD Radio™ Portable Player - Touchscreen

Congratulations on your purchase of a high-quality Insignia product. Your HD Radio Portable Player represents the state of the art in portable radios and is designed for reliable and trouble-free performance. Use this guide for initial setup of your HD Radio Portable Player. See your *User Guide* for more information on using your HD Radio Portable Player.

Package contents

- NS-HD02 HD Radio Receiver
- Armband Belt
- Earphone
- USB Cable
- *User Guide*
- *Quick Setup Guide*

HD Radio

Step 1 Get to know your HD Radio Portable Player

Check out the front, side, and bottom panels to familiarize yourself with button controls and connection options.

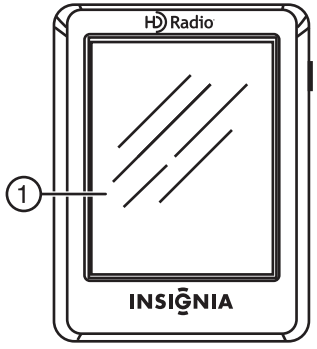

Front

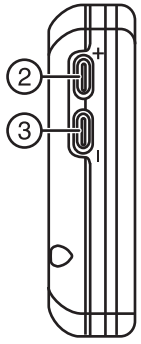

Left Side

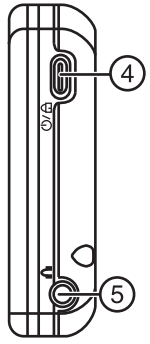

Right Side

1 LCD - Display and user interface touch screen.
2 + Volume up control.
3 - Volume down control.
4 POWER LOCK
Press to lock the touch screen function. Press again to unlock the touch screen function. Press and hold to turn your radio on or off.
5 EARPHONE JACK
Plug the included earphone into this jack.
6 CHARGE
7 RESET

Bottom

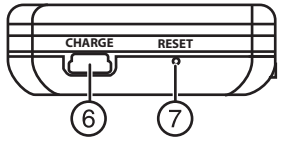

Step 2 Charging battery

Charge battery before use.

1 Connect the included USB cable to a USB port on a computer, then connect the other end of the cable to the CHARGE port on your radio.
2 Turn on the computer. While the battery is charging, the *Charging* screen appears on the player screen.
When charging is complete, the *Charging Complete* screen appears.

Charging

Charging Complete

NS-HD02_10-0693_QSG_V1_ENG_Final_press.pdf 2 9/14/2010 11:39:01 AM

Step 3 Understanding radio modes

Your radio has three radio modes: analog (FM), HD Radio, and RBDS (Radio Broadcast Data System).

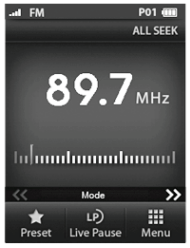

The analog (FM) mode is the default mode. When receiving an FM signal, the "FM" icon appears on the display.

Analog (FM)

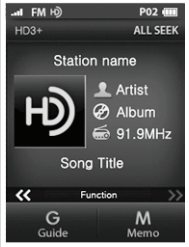

The HD Radio mode is the new, digital mode. When receiving an HD Radio signal, the "HD" icon and the channel number appear on the display.

HD Radio

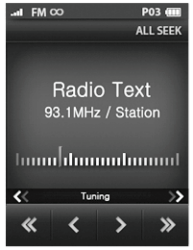

RBDS (Radio Broadcast Data System) mode provides information features including the station's name. The RBDS text is usually centered. When the text fills the display, it begins scrolling. When receiving an RDS signal, the "RBDS" icon ∞ appears on the display.

RBDS (Radio Broadcast Data System)

Step 4 Using your radio

Turning your radio on or off

To turn your radio on or off:

- Press and hold 1 second ⏻/🔒. Your radio turns on and the HD RADIO splash screen appears on the display. Press and hold for 1 second again to turn the radio off.

Lock & Unlock your Radio

1 Press the ⏻/🔒 button to show the locking display status.
2 Press 🌐 to unlock the screen and go to operating status. Operating display status is the normal operating status where the touch screen and key buttons work.
3 Press ⏻/🔒 again. Your radio display dims. If there is no key input or screen touch for three seconds (or the time you set in the menu) the backlight automatically turns off. If there is any key input or the screen is touched while the screen is dim, the backlight turns on.

Adjusting the volume

- Press the + button to increase the volume or press the – button to decrease the volume. The volume indicator in the display shows the increase or decrease. The volume indicator disappears after three seconds.

Manually tuning to a frequency

When you manually tune, your radio goes to the next or previous frequency regardless of whether a station is broadcasting on the frequency.

To manually tune to a frequency:

- Press > for less than one second. Your radio goes to the next higher frequency. Each press >of the button changes the frequency by 0.2 MHz.
- Press < for less than one second. Your radio goes to the next lower frequency. Each press of the button changes the frequency by 0.2 MHz.
- Press and hold >or < to fast-forward or fast-reverse through the frequencies.

Automatically tuning to a station

To automatically tune to a station:

- Press >> to automatically tune to the next higher radio station. If the search reaches the top of the radio band, your radio goes to the bottom of the band and continues searching.
- Press << to automatically tune to the next lower radio station. If the search reaches the bottom of the radio band, your radio goes to the top of the band and continues searching.

Setting a preset station

To set a preset station:

1 Tune to the station you want to make a preset.
2 Press the **Preset button**.
3 If you want to store then press **Store button**, and press "**YES**" button.
4 When you press one of the presets on the screen, it is highlighted. Press the preset again or press the **Select button** to go to the preset channel.
5 Press the **Return button** to exit without store.

Note: You can store as many as 20 presets.

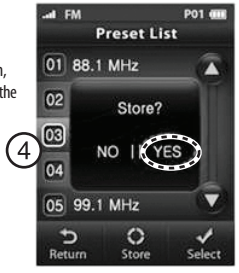

Caution

Listening to your radio with the volume set too loud or using earphones for extended periods of time can damage your hearing. You should set the volume level to medium (the medium level is usually less than 2/3 of the maximum).

Step 5 Using the armband

1 Slide your HD Radio Portable Player into the armband pocket.

2 Wrap the armband around your upper arm with the radio facing out.

© 2010 BBY Solutions, Inc. All rights reserved. INSIGNIA is a trademark of BBY Solutions, Inc. Registered in some countries. All other products and brand names are trademarks of their respective owners.
HD Radio(TM) Technology manufactured under license from iBiquity Digital Corp. U.S. and Foreign Patents. HD Radio(TM)and the HD Radio logo are proprietary trademarks of iBiquity Digital Corp.